

en

Folding Wheelchair

Model 1.735

Model 1.736

Operating manual



MEYRA®
We move people.

Contents

Meaning of the applied markers	6
Introduction	6
List of models	6
Indications	6
Acceptance	6
Specifications	6
Use	7
Wheelchair folding/unfolding/carrying	7
Adjustment	7
Reinstallation	8
Life span	8
Overview	9
Brake	10
Pressure brake - user	10
Locking the brakes	10
Releasing the brakes	10
Service brake	10
Drum brake for accompanying persons	11
Function as operating brakes	11
Leg supports	12
Calf belt	12
Removing the calf belt	12
Attaching the calf belt	12
Length adjustment of the calf belt	12
Heel strap	13
Removing the heel strap	13
Attaching the heel strap	13
Length adjustment of the heel strap	13


Lower leg support	14
Footplates	14
Footboard	14
Leg support upper part	15
Turning the leg supports to the side	15
Swivelling in the leg supports	16
Removing the leg supports	17
Attaching the leg supports	17
Mechanically height-adjustable leg supports	18
Lifting/lowering the leg support	18
Lifting/lowering the amputee leg support	18
Arm supports	19
Removing the arm support	20
Inserting the arm support	22
Inserting the arm support	23
Swivelling up the arm support	24
Height adjustment of the arm support	25
Back support	26
Back support belt, standard	26
Back support with angle adjustment	26
Height adjustable back support	26
Adjustable back	26
Removing the back support upholstery	27
Placing the back support upholstery	27
Push handles	28
Push handles with tube guidance	29
Height adjustment of the push handles	29
Wheels	30
Drive wheels	30
Manoeuvre rollers	30
Support castors	31
Support castor length	31
Swivelaway support castors	31
Swinging the support castors	31

Specialities for double handrims	32
Propelling the wheelchair	32
Folding/unfolding with double handrims	32
Head support	33
Therapy table	33
Retaining strap	34
Fastening the retaining strap	34
Opening the retaining strap	34
Adjustment of belt length	34
Basic safety information	35
Accompanying person	35
Transfer out of the wheelchair	35
Reaching for objects	35
Driving on falling, rising or transverse gradients	35
Crossing obstacles	36
Transport in vehicles	36
Transport safety of the empty wheelchair	36
Transport of people inside a motor vehicle	36
Transport in public methods of transportation	37
Driving on public highways	37
Cleaning	37
Finish	38
Disinfection	38
Disposal	38
Maintenance	38
Maintenance	39
Maintenance schedule	40
Technical data	42
Tyre pressure of pneumatic tyres	42
Data according to ISO for model 1.735 Avanti	43
Further technical data for model 1.735 Avanti	44
Data according to ISO for model 1.736 Avanti	45
Further technical data for model 1.736 Avanti	47

Meaning of the symbols on the washing instruction	48
Meaning of the labels on the wheelchair	49
Meaning of the symbols on the type plate	50
Inspection certificate	51
Notes	52
Warranty / Guarantee	54
Warranty / Guarantee section	55
Inspection certificate for transfer	55

MEANING OF THE APPLIED MARKERS

Safety instructions with a coloured background are mandatory and need to be observed under any circumstance!

-  This symbol indicates tips and recommendations
- [] Reference to a picture number
- () Reference to a function element within a picture.

INTRODUCTION

Read and observe this manual before first operation. Children and juveniles should read this documentation together with their parents respectively a supervisor or accompanying person before first use.

This operating manual is to help you get accustomed to the handling of the wheelchair as well as to prevent accidents.

Users with visual impairments can find the PDF-files together with further information on our website:

< www.meyra.com >.

-  Contact your specialist dealer when required.

Information about product safety and possible recalls of our products can be found in the < *Infozentrum* > on our website:

< www.meyra.com >.

Our implemented assembly groups and components fulfil the demands of the norms of correspondence acc. to EN 12183 for durability against inflaming.

LIST OF MODELS

This operating manual applies to the following models:

Model 1.735



Model 1.736

Model 1.736 (custom made)

INDICATIONS



In case of allergic reactions, skin rashes and/or pressure sores during the use of the wheelchair sores contact a doctor immediately.

If the following indications occur we recommend the application of this mobility product:

-  Walking disability resp. extremely limited walking ability as part of the basic need to move around in your own home.
-  The need to be able to leave home for a short walk in fresh air or in order to reach the places, commonly in the perimeter of the home, required to fulfil basic needs.

ACCEPTANCE

All products are checked for faults in the factory and packed in special boxes.

-  However, we request that you check the vehicle for possible transport damage immediately on receipt – preferably in the presence of the carrier.
-  The packaging of the wheelchair should be stored for a further transport that might become necessary.

SPECIFICATIONS

The wheelchair was developed for adults and adolescents. The wheelchair solely serves to transport one person in the seat and not as a hauling aid, transporter or similar.

USE


Do not reach into the spokes or grip the tyres of the rotating wheels. – Danger of injury!

Do not reach into the space between the pressure brake and the tyre when propelling the wheelchair. – Danger of injury!


Avoid a jerky propulsion of your wheelchair. – Danger of tipping over or tilting!

Do not use the wheelchair without attached leg supports and arm support units!

The wheelchair is applicable on level, firm surfaces and can be used as follows:

- for indoors (e.g. apartment, day care),
 - outdoors (e.g. paved paths in parks),
 - as a companion on tours (e.g. in a bus or train).
-  Your wheelchair with a seat width of more than 500 mm is not suited for transport in a train.
- Never expose the wheelchair to extreme temperatures and damaging environmental conditions, such as sunlight, extreme cold or salty water.
 - Sand and other dirt particles can seize on moving parts and render them without function.
 - Use only the handrims on the drive wheels to propel your wheelchair.

You must not let yourself be carried in your wheelchair by having the wheelchair lifted from the floor. Parts that are not securely fixed, e.g. side elements or leg supports, can come away and thus cause an accident.

 The wheelchair is a vehicle and not a carrying device.

Only apply the wheelchair within the scope of the specifications and limitation described in chapter *Technical data* on page 42.

WHEELCHAIR FOLDING/ UNFOLDING/CARRYING

Your wheelchair can be folded without the aid of tools.



1. Remove the seat cushion, if applicable.
2. Lift up the footplates or remove the leg supports.
3. Pull the seat belt upward in the centre of the front and back.
4. If necessary remove the connection rod of the double handrim drive or the push bar.

Your wheelchair can be carried without difficulty when folded.

For this, push one lower arm from the front under the upward folded seat belt. Place other hand underneath the rear seat fold for support.

Lift the wheelchair to horizontal position.

Tip the wheelchair slightly to one side in order to make the unfolding easier. At the side resting on the floor, press the seat tube down to the end stop.

-  You may need to press down both seat tubes with the hands in order to do this.
-  Ensure that the seat tube sits securely on the support surface.

ADJUSTMENT

Always have adaptation and adjustment work carried out by a specialist dealer.

The wheelchair offers manifold adjustment possibilities to individual vital statistics. The wheelchair should be adapted to your needs by a specialist dealer before the first use. The adaptation will take into account the driving experience, the physical limits of the user and the main place of use of the wheelchair.

- ✎ We recommend a regular control of the wheelchair adjustment in order to ensure a long-term optimal provision even with changing illness/handicap patterns of the user.

REINSTALLMENT

The wheelchair is suited for reinstallation. With the building block system the wheelchair can be fit to accommodate different handicaps body sizes. Before reimplementation the wheelchair is to undergo a complete inspection.

- ✎ Hygienical measures required for reinstallation are to be carried out according to a validated hygienic plan and must include disinfection.


LIFE SPAN

We expect an average life span of about 4 years for this product, as far as the product is applied for its designated purpose and all maintenance and service guidelines. The life span of your product depends upon the frequency of use, the application environment and care. The implementation of spare parts can prolong the life span of the product. As a rule spare parts are available up to 5 years after production is discontinued.

- ✎ The indicated lifespan does not constitute additional guarantee.

OVERVIEW

The overview shows, representative for all models, the most important components of the wheelchair.

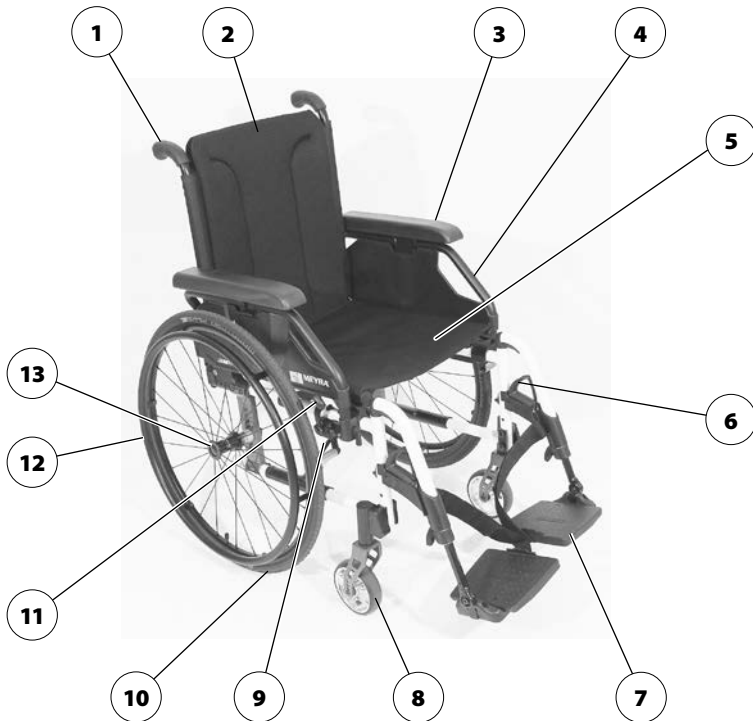

Pos. Description

- | | |
|----------------------------------|--|
| (1) Push handle | (8) Steering wheel |
| (2) Back support | (9) Type plate (on the crossbrace) |
| (3) Arm support | (10) Driving wheel |
| (4) Arm support / clothes guard | (11) Brake lever – pressure brake |
| (5) Seat belt/seat cushion | (12) Handrims |
| (6) Locking lever – Leg support | (13) Locking knob – Quick release axle |
| (7) Footboard/footplates divided | |

BRAKE

Arrange an immediate repair of the brakes by your specialist workshop if the braking performance reduces.

Wheelchairs with PU-tyres should be stored safely without activated pressure brakes in case of longer standing periods.

By locking the brakes with the brake lever (1), the wheelchair is secured against rolling away unintentionally (parking brake).

Depending on the version, the wheelchair can be equipped with pressure brakes (2) or with drum brakes (3).

☞ Therefore observe the *Maintenance schedule* on page 40.

Pressure brake - user

Locking the brakes

To secure the wheelchair against any unintentional rolling, press both brake levers forward all the way [4].

☞ It should not be possible to push the wheelchair forward when both brakes are locked.


Releasing the brakes

Pull both brake levers back all the way [2].

Service brake

The wheelchair is braked down with help of the handrims.

☞ If needed use suitable gloves in order to brake down the wheelchair.

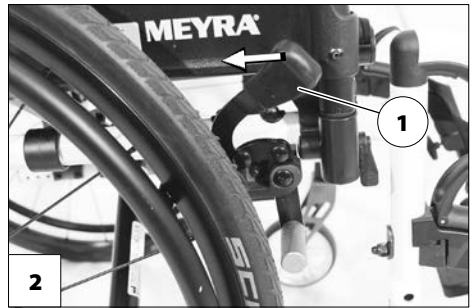

Drum brake for accompanying persons

The drum brake is activated by the accompanying person through the brake levers [1].

Function as operating brakes

Use both brake levers evenly and only lightly in order to achieve a controlled deceleration of the wheelchair.




Locking the drum brakes

Pull both brake levers [1] and press the locking latch (2) forward.

Release the brake lever. – Depending on the adjustment the latch engages in the first (A) or second (B) locking position and activates the brake.


⚠ If the third locking position (C) is required to activate the brake, it must be readjusted by a specialist workshop.

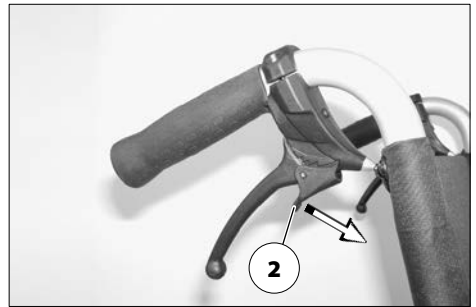

Loosen the drum brakes

Pull both brake levers (1) until the latches (2) automatically jump out of the locking points.

Let go of both brake levers. – The parking brakes are released and the wheelchair ready for use.

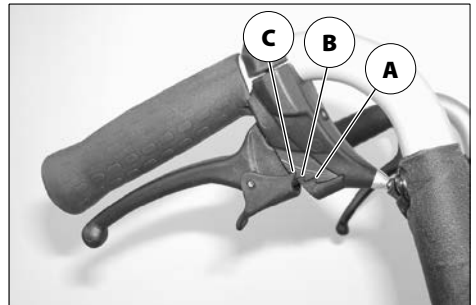

LEG SUPPORTS

Before any actions on the leg supports the wheelchair is to be secured against unintentional rolling motions.

- Therefore observe chapter *Brake* on page 10.

Calf belt

Do not drive without the calf belt. – Danger of accidents.

The removable calf belt (1) prevents the feet from sliding off the back of the footboard.

- The calf belt must be removed in order to swivel away the leg supports.
- The calf belt is omitted for height adjustable leg supports and is replaced by a calf pad.



Removing the calf belt

For removal the calf belt is to be pulled from the attachment pins (2).

Attaching the calf belt

For attachment both loops of the calf belt are slid over the attachment pins (2).

Length adjustment of the calf belt


For length adjustment, the calf belt is guided around the special attachment pins (2) and adjusted in length with a velcro fastener.

Heel strap

The heel strap (1) prevents the feet from sliding off the back of the footplates.

Removing the heel strap

For removal, the heel strap is pulled off of the fastening pin (2) or pulled off of the frame tube (3) after opening the velcro fastener.

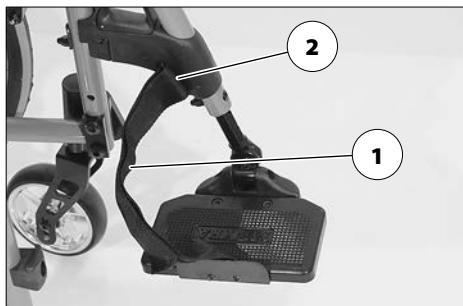


Attaching the heel strap

For attachment, the loop of the heel strap is slid over the fastening pin (2) or the heel strap is guided around the frame tube (3) and closed with the velcro fastener.

Length adjustment of the heel strap

For length adjustment the heel strap is adjusted with help of the velcro fastener to the corresponding length.

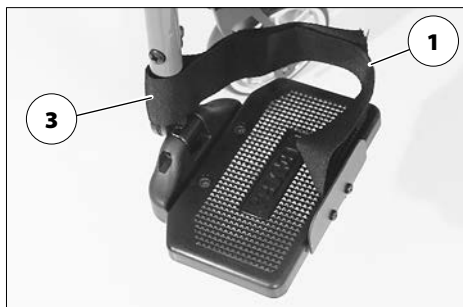

Lower leg support

The footplates, resp. footboard needs to be folded up before entry or exit [1].

- ☞ Check the locking points!
 - Remove both feet from the footplates.
 - Remove lower calf belt, if present.
- ☞ Therefore observe chapter *Calf belt* on page 12.
- ☞ Before starting to drive the footplates resp. footboard need to be folded back down [3] and the calf belt attached.



Footplates

The footplates can be folded outward and up [1] resp. inward and down [3].



Footboard

Fold the footboard [4] up before swivelling away and removing the upper leg support.


Folding up the footboard

In order to fold up the footboard lift the loose end of the footboard as far as possible [5].



Folding the footboard down

In order to fold down the footboard, lower the loose end of the footboard as far as possible down onto the footboard bracket [4].

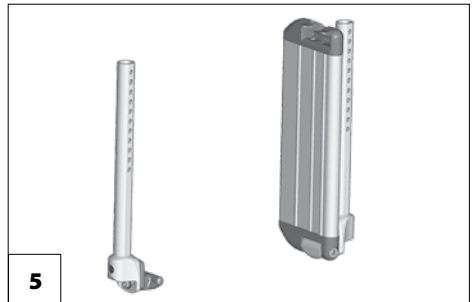

Leg support upper part

The upper leg support with an inserted lower leg support is termed leg support.

Turning the leg supports to the side

Leg supports turned to the side are released automatically and can easily come off. Note this when handling (e.g. transport).


For easy transfer out of/into the wheelchair as well as driving closer to a closet, bed or bathtub the leg supports can be swivelled away toward the in-/outside [1].

- ☞ Remove the calf belt, if applicable, before swivelling away the leg supports.
 - ☞ Therefore observe chapter *Calf belt* on page 12.

Fold up the footplates resp. footboard in order to swivel away the leg supports.

- ☞ Therefore observe chapter *Lower leg support* on page 14.

Afterwards pull or press the respective locking lever (2) backward and swivel the corresponding leg support outward.

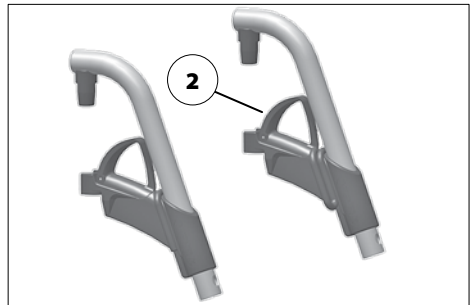

Swivelling in the leg supports

For inward swivelling, let the leg supports swivel forward until the lock audibly engages [1].

- ☞ After audibly swivelling the leg supports inward check the respective locking device.
- ☞ Afterwards observe chapter *Lower leg support* on page 14.



Removing the leg supports

For easy transfer into and out of the wheelchair as well as a reduced wheelchair length (important for transport) the leg supports can be removed [1].

- ☞ Remove the calf belt before swivelling away the leg supports.
 - ☞ Therefore observe chapter *Calf belt* on page 12.

For removal first swivel the leg support sideways [2] and then remove them toward the top [1].

- ☞ Therefore observe chapter *Turning the leg supports to the side* on page 15.
- ☞ Watch for possible danger of jamming!

Attaching the leg supports


For inserting press the leg supports, swivelled to the side, parallel to the front frame tube and lower it into place. – In doing so the holding pin must slide into the frame tube.

- ☞ After attachment swivel the leg supports inward [3].
 - ☞ Therefore observe chapter *Swivelling in the leg supports* on page 16.



Mechanically height-adjustable leg supports

Never put the free hand into the adjustment mechanism. Have the leg support secured by an accompanying person against unintentionally falling down. Do not let the leg support drop on its own weight. – Danger of injury!

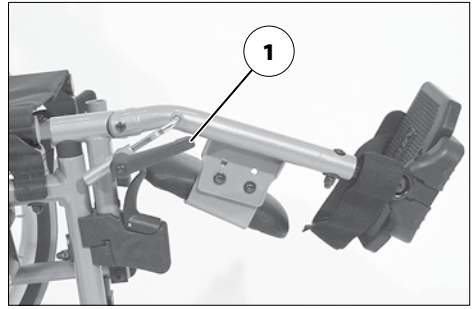


Lifting/lowering the leg support

Before lifting/lowering relieve the leg support by an accompanying person by slightly lifting it up.

Afterwards loosen the clamping lever (1) and have the leg support lifted/lowered slowly to the desired level by an accompanying person.

After the adjustment retighten the clamping lever (1).

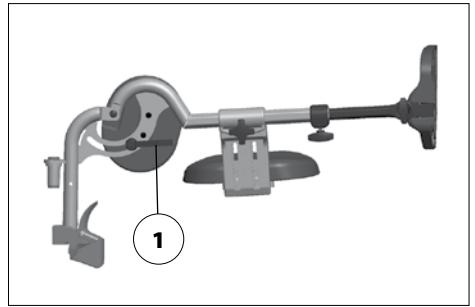


Lifting/lowering the amputee leg support

Before lifting/lowering relieve the amputee leg support by an accompanying person by slightly lifting it up.

Afterwards loosen the clamping lever (2) and have the amputee leg support lifted/lowered slowly to the desired level by an accompanying person.

After the adjustment retighten the clamping lever (2).

- ⚠ In doing so ensure that the toothing of the angle adjustment grips into place.

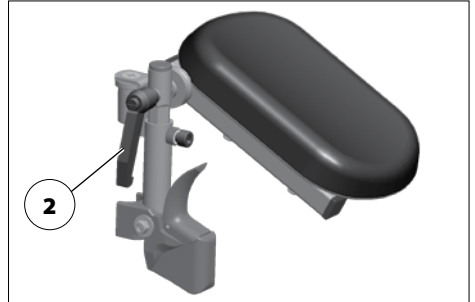

ARM SUPPORTS

Do not use the arm supports to lift or carry the wheelchair.

Do not drive without the arm supports.

No not grab between the frame and arm support. – Danger of squashing!

When the wheelchair is being pushed by an attendant the user is to place his hands onto the arm cushions or in his lap and not at the sides between body and arm support. – Danger of squashing the fingers!

The arm supports version 1 [1] and version 2 [2] are (depending on model and version) removable, height adjustable and at the same time serve as padded arm support, clothes guard and wind guard.



Removing the arm support

Version 1:

Fold the locking levers (2) first in order to remove the arm support.

Afterwards swivel the arm support towards the back [3] and lift it off [4].



Version 2:

Press the locking button (1) to remove the arm support.

Swivel the arm support up at the back [2] and lift it off towards the top [3].




Inserting the arm support

Version 1:

First insert the arm support beside the seat surface from the top into the rear bracket [1].

Then swivel the arm support down and press it into the front bracket [2]. In order to secure it in place, swivel the locking lever down (3).

- ☞ The rear tube of the arm support must lie in the guide groove on the back support (4).

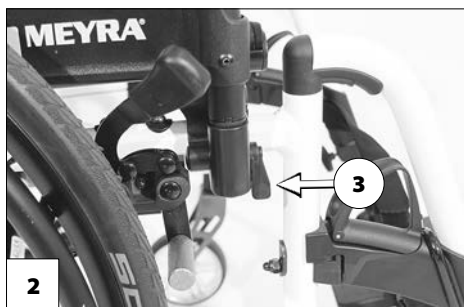

Inserting the arm support


Version 2:

For attaching the arm support, you need to previously insert the rear slanted bolt (1) into the respective receptacle (2).

- ☞ When swivelling down the arm support, take care that the bracket (3) grips around the back tube.

Then swivel the arm support forward into the respective bracket until the locking button (4) audibly clicks into place.

- ☞ The swivelling forward automatically engages the rear locking device of the arm support.

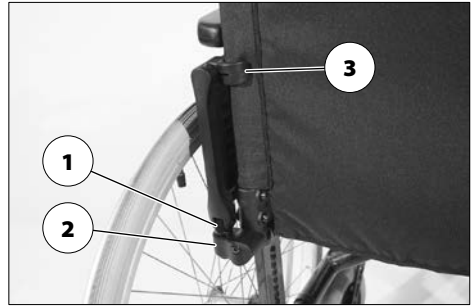

Swivelling up the arm support


For transfer out of/into the wheelchair, the arm support can be swivelled upward toward the back as well as folded behind the back support [1].

Version 1:

Fold the front locking lever up in order to swivel up the arm support (2).

Afterwards swivel the arm support back and up [3] and fold it behind the back support [1].

- ⚠ On the version with drum brake, the arm support cannot be folded behind the back support.

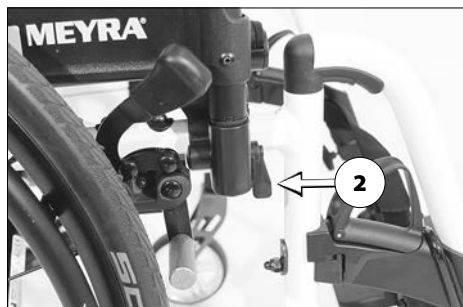

Height adjustment of the arm support

For height adjustment of the arm support secure the support pad with one hand to prevent it from falling down.

Version 1:

The upholstered arm support pads can be height adjusted in 5 steps [4].

For lifting or lowering the padded arm support, pull or press the lever (5) with your fingers and at the same time slide the padded arm support to the desired height. Afterwards slide the padded arm support again until it audibly locks into place.


- ☞ Check the locking device by trying to pull or push the padded arm support.

Version 2:

The upholstered arm support pads can be height adjusted in 5 steps [7].

For lifting or lowering the padded arm support press down the pressure button (6) and at the same time slide the padded arm support into the desired position. Afterwards slide the padded arm support again until it audibly locks into place.

- ☞ Check the locking device by trying to pull or push the padded arm support.

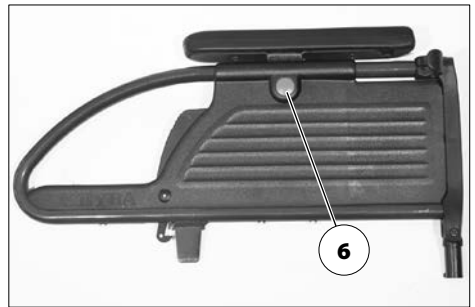

BACK SUPPORT

Back support belt, standard

The back strap is tightened through the back tubes (1).

The extended back support element is velcro strapped underneath the seat strap.



Back support with angle adjustment

An angle adjustment increases the danger of tilting and may only be carried out with support castors attached.

The angle adjustable back support [2] can be adjusted in angle by +/- 10° in 5°-steps.



Height adjustable back support


The height adjustable back support [3] is continuously adjustable in height.



Adjustable back

The lag of the back support strap is adjustable with help of the velcro fastener on the tension straps (4).

The cushion (5) is placed over it and attached with the velcro strap.

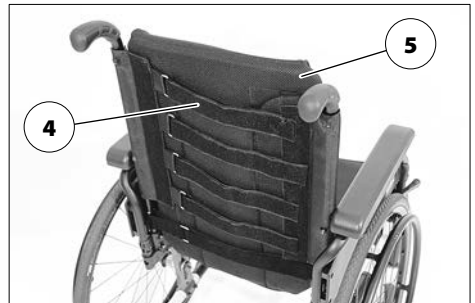

Removing the back support upholstery


For removal, first pull off the rear part of the back support upholstery (1), then fold it over to the front and pull it off of the adjustable back strap (2).

Placing the back support upholstery

The stability of the upper body can be influenced through the adjustable back support strap.

For placing the back support upholstery (1), lay it centred around the upper upholstery strap (4) and attach it to the adjustable back strap with the velcro fasteners (2). [5].

- For a soft upper edge you should leave a little space between the upper spanning belt (4) and the folded back support upholstery (1).
- When the user leans against the front cushion again, pay attention that:
 - The pressure of the back must be spread evenly throughout the back cover.
 - A complete hand should fit in between the cover and back at the upper edge of the back cover.

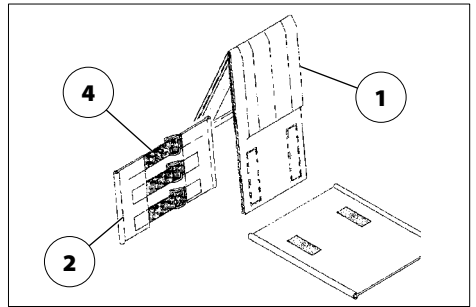

PUSH HANDLES

The height adjustable push handles are about 20 cm continuously height adjustable and secured against being pulled out [1].

Push handles with clamping device

- ☞ In doing so, hold onto the push handle that is to be adjusted with one hand.
- ☞ After each adjustment the clamping lever is to be tightened sufficiently, so that the push handle cannot be turned anymore.

Height adjustment:

Loosen the clamping screw with the clamping levers (2) so far that the respective push handle can be adjusted into the desired position.

Angle adjustment:

In order to turn the push handles, loosen the clamping screw through the clamping lever (2) and turn into the desired position.

Extracting/inserting:



1. Press down the respective spring button (3) in order to extract or insert the push handles.
2. Afterwards retighten the clamping screw with the clamping levers (2).

Special features of the clamping lever

The clamping lever (2) can be turned into an operation position that is comfortable for you.

For this pull the clamping lever (2) outward (direction of the arrow), until the teething is released.

After turning the clamping lever (2) let the teething snap back into place.

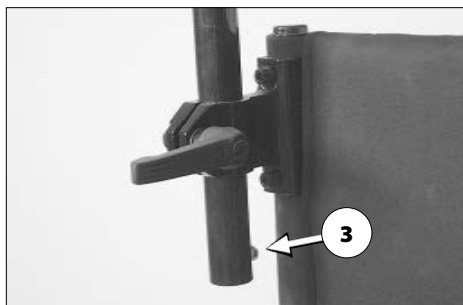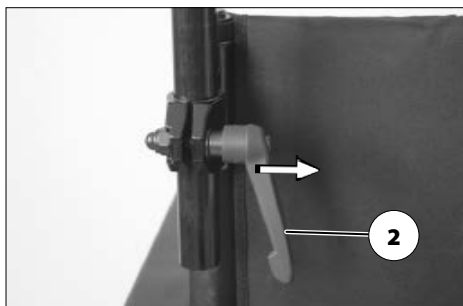


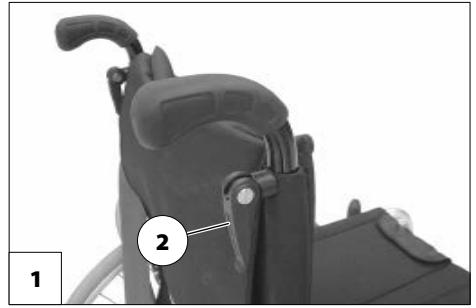
Push handles with tube guidance

The push handles [1] are guided swivel-proof inside the back tube and continuously height adjustable by up to 10 cm.

Height adjustment of the push handles

With the clamping lever swivelled down, the respective push handle may not let itself be moved.

- First hold onto the push handle that is to be adjusted then swivel the corresponding clamping lever (2) with the other hand into the horizontal position.
 - Then adjust the push handle to the desired height and clamp it tight [3].
 - For this press the clamping lever downward (1).
-  After each adjustment the secure fit of the push handles is to be checked with a pull-/push test!



WHEELS

Drive wheels

After inserting the drive wheel the locking button (2) must stick a couple of millimetres out of the wheel nut.

The drive wheels are supported on a quick release axle [1] and can be removed resp. attached without tools.

First press the locking button (2) of the quick release axle in the center of the hub.

Afterwards remove or attach the drive wheel.

- ✎ The air pressure value for the tyres of the wheelchair can be read in the *Technical data* on page 42 or details on both sides of the tyre cover.
- ✎ If the drive wheels has too much side-ward lag or the quick release axle does not engage, contact your specialist dealer immediately for repair.
- ✎ No person may be seated in the wheelchair during assembly or removal. The wheelchair should stand on a level and firm surface. Before starting the disassembly work, support the frame to prevent the wheelchair from tipping over and secure it to prevent an unwanted movement or tipping over.



- ✎ When parking the wheelchair the brakes of the shunting castors are to be engaged.

MANOEUVRE ROLLERS

With active shunting castors the wheelchair cannot be braked resp. secured through the brake levers.

The shunting castors [3] enable shunting in tight spaces.

- ✎ When the drive wheels are attached the shunting castors have no function.

SUPPORT CASTORS

Support castors do not provide sufficient protection against tipping over in certain situations.

On both sides a bent tube with two laterally attached castors [1] serve to increase the tilting stability.

Support castor length

In order to adjust the length of the support castors, press down the spring button (2) and telescopically pull or push the support castor to the desired length.

Swivelaway support castors

The support castors [1] can be swivelled inward underneath the seat [3].

- Swivelling of the support castors can be done by an accompanying person or aid.

Swinging the support castors

Press the support castors with your foot down and out of the lock, then swivel them inward underneath the seat [3] or toward the back [1], until the lock engages automatically.



SPECIALITIES FOR DOUBLE HANDRIMS

Before each ride ensure the secure fit of the connection rod (2).

The wheelchair can be propelled with one hand with the double handrim [1].

Propelling the wheelchair

Both handrims are to be operated simultaneously to drive straight forward.


A curve can be driven by operating only one handrim.

Folding/unfolding with double handrims

The telescopic connector tube (2) is to be removed before beginning the folding procedure.

In order to remove the connection tube (2) the clamping screw is to be loosened through the handwheel (3).


After unfolding the wheelchair the telescopic connection tube (2) is to be replaced and the clamping screw retightened with the handwheel (3).

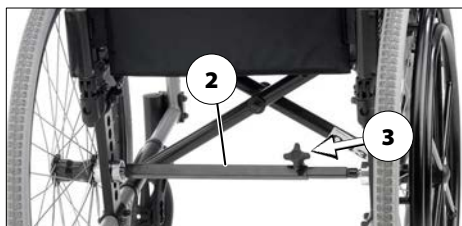

HEAD SUPPORT

A headrest mounted to the wheelchair serves as a support for the posture of the head, not as a transport security.

The upper edge of the adjustable head support [1] should always be close to the back of the head at about eye level. For height adjustment and removal of the head support loosen the clamping screw (2).

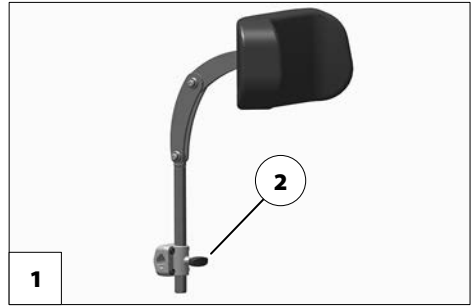

THERAPY TABLE

Sharp objects (e.g. watches, rings, knives or belt buckles) as well as coarse dust can cause unattractive brush marks in the surface of the therapy table.

Do not place any hot objects onto the therapy table.

Do not drive with the therapy table attached when there are loose objects or containers with fluids on it.

Do not use aggressive or granular cleaning agents to clean the therapy table.

Do not use the therapy table as handle for carrying the wheelchair.

The therapy table is pushed from the front over the arm support cushions [3].

- ☞ Ensure that the therapy plate sits securely on the arm supports pads.



RETAINING STRAP

The retrospective assembly of a retaining strap is only to be carried out by a specialist workshop!

The retaining strap is not part of the retaining system for the wheelchair and/or the driver during transport in motor vehicles.

The retaining strap [1] serves to hold one person seated inside the wheelchair.

- Additional stabilisation of the sitting position.
- Prevents the user from slipping forwards out of the seat (e.g. during abrupt braking).

The retaining strap [1] is screwed from the back onto the respective back support tube.

Fastening the retaining strap


Make sure that no objects are trapped between belt and the body! – Thus you avoid painful pressure points.

Pull both belt halves to the front and slide the catch halves together so that they latch together [1].

- ☞ Afterwards conduct a pulling test.

Opening the retaining strap

To open the retaining strap press the red unlocking knob (2) inside the buckle.

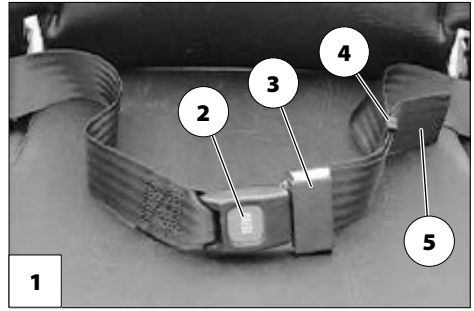

Adjustment of belt length

- ☞ The retaining strap should not be pulled too tight.

Push or pull the strap (5) in the respective direction in order to extend or shorten the strap.

- ☞ Therefore hold the lock part or buckle (3) at a right angle to the strap.

Fasten excessive strap by repositioning the plastic slider (4).

BASIC SAFETY INFORMATION

Accompanying person

The accompanying person must be made aware of all possible danger situation before the start of his/her supportive involvement. The parts of your wheelchair that are held onto by the accompanying person are to be checked for tight fit.

Transfer out of the wheelchair

Drive with the wheelchair as closely as possible to the spot where you want to switch out of the wheelchair.

- ☞ Herefore additionally observe chapters *Brake* on page 10 and *Swivelling up the arm support* on page 24.
- ☞ We recommend to conduct the transfer from the wheelchair together with an aid.

Reaching for objects

Avoid an extreme forward or backward inclination of the upper body when picking up or placing heavy objects. – Danger of wheelchair tipping over, especially in the case of narrow seat widths and high seat heights (seat cushion)!

Driving on falling, rising or transverse gradients

For safety reasons, the maximum permitted gradient is limited because the tip-over stability and the braking and steering behaviour are impaired by a reduced floor/road.

- ☞ Observe chapter *Technical data* on page 42.

For your own safety, we recommend that you use the assistance of an accompany-

ing person for driving slopes of more than 1% tilt.

- ☞ This low gradient value is valid for persons that are not able to effect even the smallest centre of gravity change by changing the position of their upper body.

The accompanying person should be aware that the control of the wheelchair requires more strength on a downward slope/ hills than on a level driving surface and that there is an increased danger of slipping.

Never lean towards the downhill direction when driving on rising, falling or transverse gradients.

Avoid jerky changes of the driving condition (especially with critically adjusted driving parameters as for example an active wheel position).

Never drive faster than walking speed.

There is an increased danger of tilting while driving backwards.

While driving in curves and when turning on inclinations and slopes there is a danger of tilting.

The braking force transferred to the driving surface is much less on a downward slope than on a level driving surface and is further reduced by poor road conditions (e.g. rain, snow, grit, dirt). A dangerous slipping of the wheels due to excessive braking and an associated unwanted course deviation must be avoided by way of a careful dosed braking.

At the end of the downward slope, take care that the foot plates do not make contact with the ground and endanger you through a sudden braking effect.

Transverse surfaces to the driving direction (e.g. transversely sloped pavements) effect a turning of your wheelchair in the downhill direction. You or an accompanying person

must compensate for this drift by a counter-steering.

Crossing obstacles

After overcoming obstacles, the previously removed support castors need to be reattached.

Each crossing of obstacles involves a risk! Even flat obstacles (e.g. sills, carpet edges, small steps or similar) represent a danger of tipping.

The crossing of obstacles is a special danger situation in which a combination of the safety advice in the sections headed uphill driving, downhill driving and driving transverse to a slope must be observed in addition to other safety advice.

For your own safety all obstacles should only be driven over with an accompanying person.

The unassisted, safe, crossing of small obstacles (< 4 cm) is only possible with a sufficiently safe control of the wheelchair.

Always approach small obstacles, e.g. steps or curbs, slowly and at a right angle (90°) until the steering wheels almost touch the obstacle. Briefly stop the wheelchair and then drive over the obstacle.

Always drive over an obstacle forwards (not backwards) and simultaneously with both front/rear wheels in order to prevent a sideways tipping of the wheelchair.

Always maintain a safety distance between the wheelchair and drops, stairs and similar obstacles sufficient for reaction, braking and turning.

If possible, let one or more helpers lift you out of the wheelchair and carry you to the destination point.

The crossing of stairs is only possible with the assistance of two helpers who are fa-

miliar with the danger situation and firmly guide the wheelchair.

☞ The helpers may only hold (without lifting) the wheelchair with the push handles and the side frame.

Existing support castors are to be removed, since they might pose a danger to the aid under certain circumstances.

Transport in vehicles

The following procedures may be necessary due to lack of space for the transport in vehicles:

- Remove the leg supports.
- Remove the arm supports.
- Remove or fold over the back support.
- Detach drive wheels

The parts detached for the transport must be carefully stowed and carefully attached again before the next journey!

Transport safety of the empty wheelchair

Changes on the wheelchair and especially the anchor points may not be made.

All regulations and directions of the respective transport company are to be observed.

☞ Ask for these before the transport.

Only attach the fastening straps to designated parts of the car and wheelchair.

☞ View chapter *Meaning of the labels on the wheelchair* on page 49.

Transport of people inside a motor vehicle

Your wheelchair is approved as a seat for personal transport within a motor vehicle.

- ☞ Observe the guideline < *Safety with Meyra-wheelchairs, also during transport in motor vehicles* >! – This document and further information are available in the < *Infozentrum* > on our website < www.meyra.com >

Transport in public methods of transportation

Your wheelchair is not designed for user transport in public transportation vehicles. Limitations may occur. We recommend use of one of the firmly built in seats of the public vehicle.

Should it nevertheless become necessary to carry out the transport while sitting in the wheelchair, the following needs to be observed:

- Use the space designated by the public transportation services for parking.
- Observe the regulations of the transport company before parking the wheelchair.
- Park your wheelchair opposite to the driving direction in the reserved space.
- The wheelchair is to be placed so that the back support it will be supported by the border of the parking space.
- One side of the wheelchair must also lie against the border of the parking space, so that the wheelchair cannot slide away in case of an accident or sudden braking manoeuvre.
- Additionally activate the parking brakes.

Driving on public highways

In Germany you are subject to the German laws for traffic regulation (Strassenverkehrsordnung (StVO)) as a pedestrian.

Your wheelchair is equipped by the manufacturer with reflectors on the back support and drive wheels.

With limited visibility and especially in the dark we recommend to mount active lighting equipment and to turn it on in order to see better and be seen.

- ☞ When participating in public traffic the user is responsible or the functional- and operationally safe condition of the wheelchair.
- ☞ When driving in the dark avoid using the road or bicycle lanes.
- ☞ Ensure that the vehicle headlights, indicators, rear lights and reflectors are not covered by clothing or by items secured to the vehicle.

Cleaning

The plastic panelling is attacked through non-ionic tensides as well as solvents and especially alcohol.

The cushions and covers are normally fit with care instructions (instruction for care). In all other cases the following information is true:

- ☞ Clean the upholstery with warm water and hand washing liquid.
- ☞ Remove spots with a sponge or a soft brush.
- ☞ Wash off persistent dirt with commercial fine detergent.
- ☞ Do not soak! Do not machine wash!

Follow-up with clean water and allow to dry.

The chassis, reflectors and wheels can be cleaned damp with a mild detergent. Afterwards dry off well.

- ☞ Check the chassis for corrosion damages as well as other damages.
- ☞ Only clean the plastic parts with warm water and neutral detergent or soft soap.

Further information to cleaning can be found in the < *Infozentrum* > on our website: < www.meyra.com >.

Finish

The high quality finish ensures an optimum of protection against corrosion.

- ☞ For paint and chrome care the commercially available brand name paint and chrome cleansers are recommendable.
- ☞ Should the coating be damaged with scratches or similar, these areas can be touched up with our paint pen available at the specialist dealer.

Slight lubrication of moving parts will ensure for their long functioning.

Disinfection

If the product is used by more than one person (for example in a care centre), the use of a commercial disinfectant is mandatory.


- ☞ Before disinfection the upholstery and handles are to be cleaned.
- ☞ A spray- or wiping disinfection is permitted with tested and accredited disinfectants.

A list of the disinfectants and disinfection means tested and approved by the Robert Koch Institute can be found under:

< <http://www.rki.de> >.

- ☞ During the use of disinfectants it can happen that surfaces might be affected in such a fashion that the long term functionality of parts can be limited.
- ☞ In doing so the manufacturers instructions are to be observed.

DISPOSAL

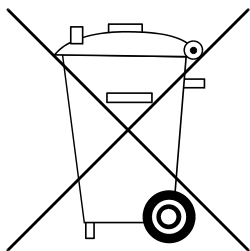

The disposal must comply with the respective national law.

Please enquire about local disposal arrangements at your municipal authority.

MAINTENANCE

An incorrect or neglected cleaning and maintenance of the wheelchair results in a limitation of the product liability.


Maintenance

The following maintenance Instruction gives you a guide for carrying out the maintenance work.

- ✎ They do not give information about the actual extent of work required on the wheelchair.

Maintenance schedule

WHEN	WHAT	REMARK
Before starting out	General Test for faultless operation.	Carry out test yourself or with a helper.
Before starting out	Test brakes for faultless operation Activate brake lever to the limit.	Carry out test yourself or with a helper. The locked wheels should not be able to turn under operating conditions. If they can still turn, the brakes must be repaired by an authorised specialist workshop.
Before starting out	Check pressure brake for wear Move brake lever to the side	Carry out tests yourself or have a helper do it. If you notice any increasing slackness on the brake lever take the wheelchair to your specialist workshop immediately for repairs. – Danger of accident!
Before starting out	Check the back tubes and frame tubes for damages	Carry out the test yourself or by a helper. If deformations or cracks occur in the welding seams, contact a specialist workshop immediately for repairs. – Danger of accident!
Especially before driving in the dark (when applicable)	Check the lighting Check the light- and indicator signal equipment as well as reflectors for immaculate performance.	Carry out test yourself or with a helper.

WHEN	WHAT	REMARK
Every 2 weeks (depending on distance covered)	Check air pressure of the tyres Tyre filling pressure:  View <i>Tyre pressure of pneumatic tyres</i> on page 42.	Carry out test yourself or with a helper. Use a tyre gauge.
Every 8 weeks (depending on distance covered)	Check tyre profile Minimum tread = 1 mm	Carry out visual check yourself. If the tyre profile is worn down or if the tyre is damaged, consult a specialist workshop for repairs.
Every 8 weeks (depending on frequency of use)	Lubricate the following components with a few drops of oil <ul style="list-style-type: none"> – Moving parts of the locking mechanism. – Brake lever bearings. 	Do it yourself or with the aid of a helper. Components must be free from used oil residues before lubrication. Please ensure that excess oil does not contaminate the environment (e.g. your clothing).
Every 8 weeks (depending on frequency of use)	Check all screw connections for secure fit	Carry out test yourself or with a helper.
Every 6 months (depending on frequency of use)	Check <ul style="list-style-type: none"> – Cleanness. – General condition. 	See Care. See Repairs.
Manufacturer recommendation: Every 12 months (depending on frequency of use)	Safety inspection <ul style="list-style-type: none"> – Vehicle 	To be carried out by the specialist dealer.

TECHNICAL DATA

All data given in the < *Technical data* > refers to the standard version.

The overall length depends on the position and size of the drive wheels.

If not noted otherwise the dimensions are determined with drive wheels of \varnothing 610 mm (24").

The widths were determined with a handrim distance of 15 mm.

Dimensional tolerance ± 15 mm, $\pm 2^\circ$.

Short form of wheelchair dimensions:

SH = Seat height

SW = Seat width

SD = Seat depth

BH = Back support height

Calculation of the max. user weight:

Attention:

- ! The maximum total load is calculated on the basis of the unloaded weight of the wheelchair and the maximum passenger weight.

Additional weight due to subsequent additions or luggage reduce the maximum permissible passenger weight.

Example:

A driver wishes to take luggage with a weight of 5 kg. Thus, the maximum user weight is reduced by 5 kg.

Tyre pressure of pneumatic tyres

Maximum tyre pressure is printed on the tyres on each side.

Full tyre pressure – steering wheel

Standard:

2.5 - 3.5 bar = 36 - 50 psi

Full tyre pressure – drive wheel

Standard:

3.0 - 4.0 bar = 44 - 58 psi

Ultra-light running tyres:

6 bar = 87 psi

High pressure:

8 bar = 116 psi

Data according to ISO for model 1.735 Avanti

	min.	max.
Overall length with leg support, medium frame	845 mm	975 mm
Overall length with leg support, long frame	900 mm	1040 mm
Overall width w wheel camber 0°	560 mm	780 mm
Overall width w wheel camber 3°	610 mm	830 mm
Overall dimensions	– kg	150 kg
User weight (incl. additional load)	– kg	135 kg
Weight of the heaviest part (drive wheel)	– kg	2.3 kg
Actual seat depth, medium frame	350 mm	430 mm
Actual seat depth, long frame	460 mm	500 mm
Actual seat width	360 mm	580 mm
Folding length	845 mm	1040 mm
Folding width w wheel camber 0°	– mm	280 mm
Folding width w wheel camber 3°	– mm	330 mm
Folding height	775 mm	960 mm
Seat surface height at front edge (without cushion)	440 mm	520 mm
Seat angle	0°	12°
Back support angle	80°	100°
Back support height (adjustable by +25 mm)	340 mm	500 mm
Foot support to seat (lower shank length)	380 mm	480 mm
Static stability downhill		6° (10 %)
Static stability uphill		6° (10 %)
Static stability lateral		6° (10 %)
Dynamic stability uphill		6° (10 %)
Angle leg support - seat surface		111°
Arm support height from seat surface	200 mm	290 mm
Back support to front edge of arm support	300 mm	340 mm
Handrim diameter	540 mm	540 mm
Axle horizontal position	25 mm	70 mm
Obstacle height	30 mm	100 mm

Further technical data for model 1.735 Avanti

	min.	max.
Minimal turning radius	1250 mm	–
Length without leg support	700 mm	760 mm
Overall height	775 mm	960 mm
Seat cushion thickness	30 mm	60 mm
Length without leg supports, drive wheels (Support castors are removed or swivelled underneath the seat)	715 mm	820 mm
Additional load:	– kg	10 kg
Transport weight (without leg supports, arm supports, cushion, drive wheels)	– kg	8.5 kg
<u>Steering wheel</u>		
ø 125 x 25 mm (5")		Solid rubber
ø 142 x 37 mm (5.5")		Solid rubber
ø 175 x 40 mm (7")		PU
<u>Driving wheel</u>		
ø 590 mm (24 x 1")		8.0 bar
ø 610 mm (24 x 1 3/8")		8.0 bar
<u>Climatic data</u>		
Ambient temperature		-25 °C to +50 °C
Storage temperature		-40 °C to +65 °C

Data according to ISO for model 1.736 Avanti

	min.	max.
<u>Overall length with leg support</u>		
Short frame, SD 35 cm / ø 559 mm (22")		880 mm
Medium frame, SD 43 cm / ø 610 mm (24")		1040 mm
Long frame, SD 50 cm / ø 610 mm (24")		1120 mm
Overall width (tightest adjustment of the handrims)	580 mm	730 mm
<u>Overall dimensions</u>		
Short frame		87 kg
Medium frame		148 kg
Long frame		174 kg
<u>User weight (incl. additional load)</u>		
Short frame		75 kg
Medium frame		135 kg
Long frame		160 kg
Weight of the heaviest part		2.3 kg
<u>Actual seat depth</u>		
Short frame	330 mm	380 mm
Medium frame	350 mm	460 mm
Long frame	480 mm	530 mm
<u>Actual seat width</u>		
Short frame	300 mm	360 mm
Medium frame	360 mm	580 mm
Long frame	360 mm	580 mm
<u>Folding length (w/out drive wheels, w/out leg supports)</u>		
Short frame		490 mm
Medium frame		610 mm
Long frame		690 mm
Folding width	280 mm	330 mm
Folding height	920 mm	920 mm
Seat surface height at front edge (w/out cushion)	390 mm	560 mm

	min.	max.
Seat angle	0°	4°
Back support angle	80°	100°
<u>Back support belt height (BH) w/out seat cushion</u>		
Short frame	340 mm	400 mm
Medium frame	340 mm	500 mm
Long frame	340 mm	500 mm
Height adjustable back support	BH	BH + 15 mm
Foot support to seat (lower shank length)	380 mm	520 mm
Static stability downhill		6° (10 %)
Static stability uphill		6° (10 %)
Static stability lateral		6° (10 %)
Dynamic stability uphill		6° (10 %)
Angle leg support - seat surface	70°	78°
Arm support height from seat surface	200 mm	290 mm
Back support to front edge of arm support	300 mm	340 mm
Handrim diameter	540 mm	540 mm
Axle horizontal position	25 mm	70 mm
Obstacle height (depending on the setting of the leg support height)	50 mm	160 mm
Minimal turning radius	1250 mm	–

Further technical data for model 1.736 Avanti

	min.	max.
<u>Length without leg support</u>		
Short frame, SD 35 cm / ø 559 mm (22")		660 mm
Medium frame, SD 43 cm / ø 610 mm (24")		770 mm
Long frame, SD 50 cm / ø 610 mm (24")		850 mm
<u>Overall height in centre height position of the drive wheels</u>		
Short frame		830 mm
Medium frame		920 mm
Long frame		920 mm
<u>Seat height, front variable</u>		
Short frame	430 mm	490 mm
Medium frame	440 mm	560 mm
Long frame	440 mm	560 mm
Seat cushion thickness	30 mm	60 mm
Length without leg supports, drive wheels (Support castors are removed or swivelled underneath the seat)	490 mm	690 mm
Additional load:	- kg	10 kg
Transport weight: (without leg supports, arm supports, cushion, drive wheels)	8 kg	11 kg
Max. loading therapy table		15 kg
<u>Steering wheel</u>		
ø 125 x 25 mm (5")		Solid rubber
ø 142 x 37 mm (5.5")		Solid rubber
ø 175 x 40 mm (7")		PU
<u>Driving wheel</u>		
ø 590 mm (24 x 1")		PU, 8,0 bar
ø 610 mm (24 x 1 3/8")		PU, 8,0 bar
<u>Climatic data</u>		
Ambient temperature		-20 °C to +40 °C
Storage temperature		-10 °C to +40 °C

Meaning of the symbols on the washing instruction

(the symbols correspond to European standard)



Wash as delicates with the indicated maximum temperature in °C



Wash as regular laundry with the indicated maximum temperature in °C



Do not bleach



Not suited for the dryer

 


Do not iron




Do not dry-clean

Meaning of the labels on the wheelchair



Attention!

Read the operating manuals and other provided documentation.

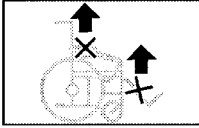

Do not lift the wheelchair at the arm supports or leg supports.

Removable parts are not suitable for carrying.

Achtung

Bremse nachstellen.

Ident.-Nr. 8390658

Attention

Readjust the brakes.

 
Achtung

Erhöhte Kippgefahr auf Steigung / Gefälle besonders in Verbindung mit kurzem Radstand.

Ident.-Nr. 205674400

Attention

Increased danger of tilting when on inclinations / slopes, especially in combination with short wheel base



Ident.-Nr. 8 460 338

Attachment possibility of the transport securing system.



The product is **not** approved as a seat within a motor vehicle.

Meaning of the symbols on the type plate



Manufacturer



Order number



Serial number



 
Production date (Year – Calendar week)



Permitted user weight



max. permissible total weight



Permitted axle weights



Max. permissible rising gradient



Max. permissible falling gradient

max. ... km/h

Permitted maximum speed



The product is approved as a seat within a motor vehicle



The product is **not** approved as a seat within a motor vehicle.

INSPECTION CERTIFICATE

Vehicle data:

Model:

Delivery note no.:

Serial-no.(SN):

Recommended safety inspection 1st year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Recommended safety inspection 2nd year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Recommended safety inspection 3rd year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Recommended safety inspection 4th year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Recommended safety inspection 5th year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

NOTES

WARRANTY / GUARANTEE

We accept legal liability for this product within the scope of or general terms and conditions and warranty and in certain cases other verbal resp. agreed upon guarantees. For warranty and guarantee demands please contact your specialist dealer with following Warranty/Guarantee section and the there included information on model description, delivery note number with delivery date and serial number (SN).

The serial number (SN) can be read off of the type plate.

Precondition for the acceptance of liability in any case is the intended use of the product, the use of original spare parts by authorised dealers as well as maintenance and inspections in regular intervals.

Guaranty is not granted for surface damages, tyres of the wheels, damages due to loosened screws or nuts as well as worn out attachment holes due to frequent assembly work.

Furthermore, damage to the drive and electronics caused by improper cleaning using steam cleaning equipment or the deliberate or accidental flooding of the components are also excluded.

Interferences through radiation sources such as mobile phones with high transmission power, HiFi-equipment and other extreme interference radiators outside of

norm specifications cannot be declared as warranty or guarantee claims.

Attention:

! Failure to observe the instructions in the operating manual, improperly carried out maintenance work and, especially, technical changes and additions (add-ons) carried out without our prior consent will lead to a general loss of guarantee and product liability.

Note:

This operating manual as a part of the product is to be handed out in case of a change of owner.

We reserve the right to make technical improvements.



The product conforms with the EC Directive 93/42/EEC (MDD) for medical products.

Warranty / Guarantee section

Please fill out! Copy if necessary and send the copy to the specialist dealer.

Warranty / Guarantee

Model designation:

Delivery note no.:

SN (view type plate):

Date of delivery:

Stamp of the specialist dealer:

Inspection certificate for transfer

Vehicle data:

Serial-no.(SN):

Model:

Delivery note no.:

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Your specialist dealer

MEYRA GmbH



Meyra-Ring 2
D-32689 Kalletal-Kalldorf



Tel +49 5733 922 - 311
Fax +49 5733 922 - 9311



info@meyra.de

www.meyra.de
